



4th Clutch Transmission Fluid Pressure Switch Replacement

1. Raise the vehicle on a lift.
2. Remove the splash shield.
3. Disconnect the connector from the 4th clutch transmission fluid pressure switch (A).
4. Remove the switch, then install a new one with a new sealing washer (B). Do not tighten the switch using the plastic connector.
5. Check the connector for water, corrosion, dust, and oil, then connect the connector securely.
6. Install the splash shield.

