



2nd Clutch Pressure Switch Replacement

1. Remove the rear stiffener (A).

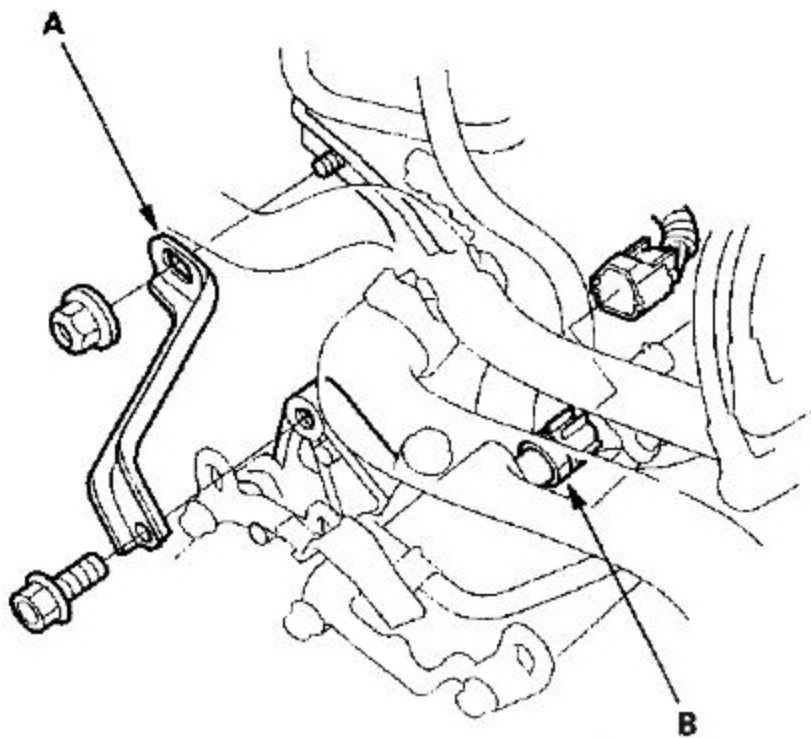


2. Disconnect the 2nd clutch pressure switch connector (B).

3. Replace the 2nd clutch pressure switch, then install a new one with a new sealing washer. Tighten the switch on the metal part, not the plastic part.

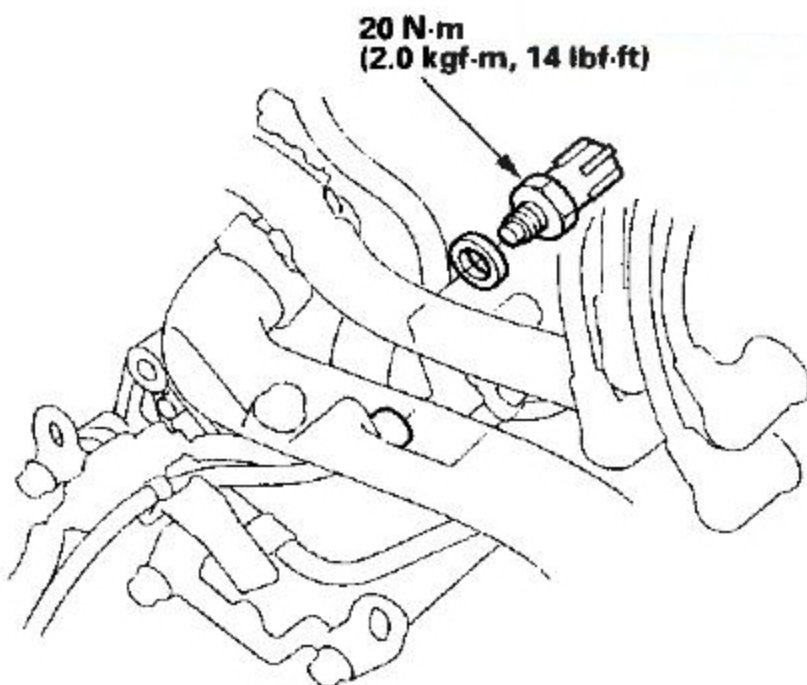

4. Reconnect the connector (A), making sure there is no water, oil, dust, or other foreign particles inside it.

10 x 1.25 mm
38 N·m (3.9 kgf·m, 28 lbf·ft)

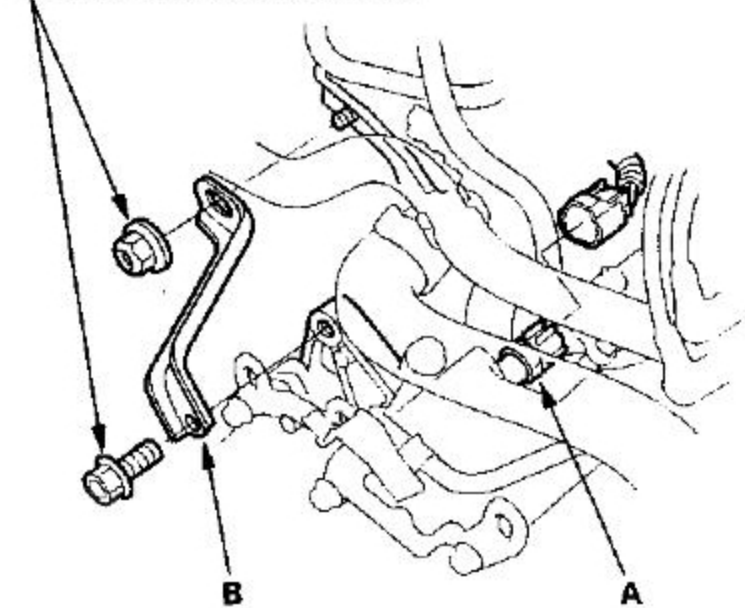


5. Install the rear stiffener (B).

Application:

4AT


Honda Odyssey 1998

28250-RPC-003

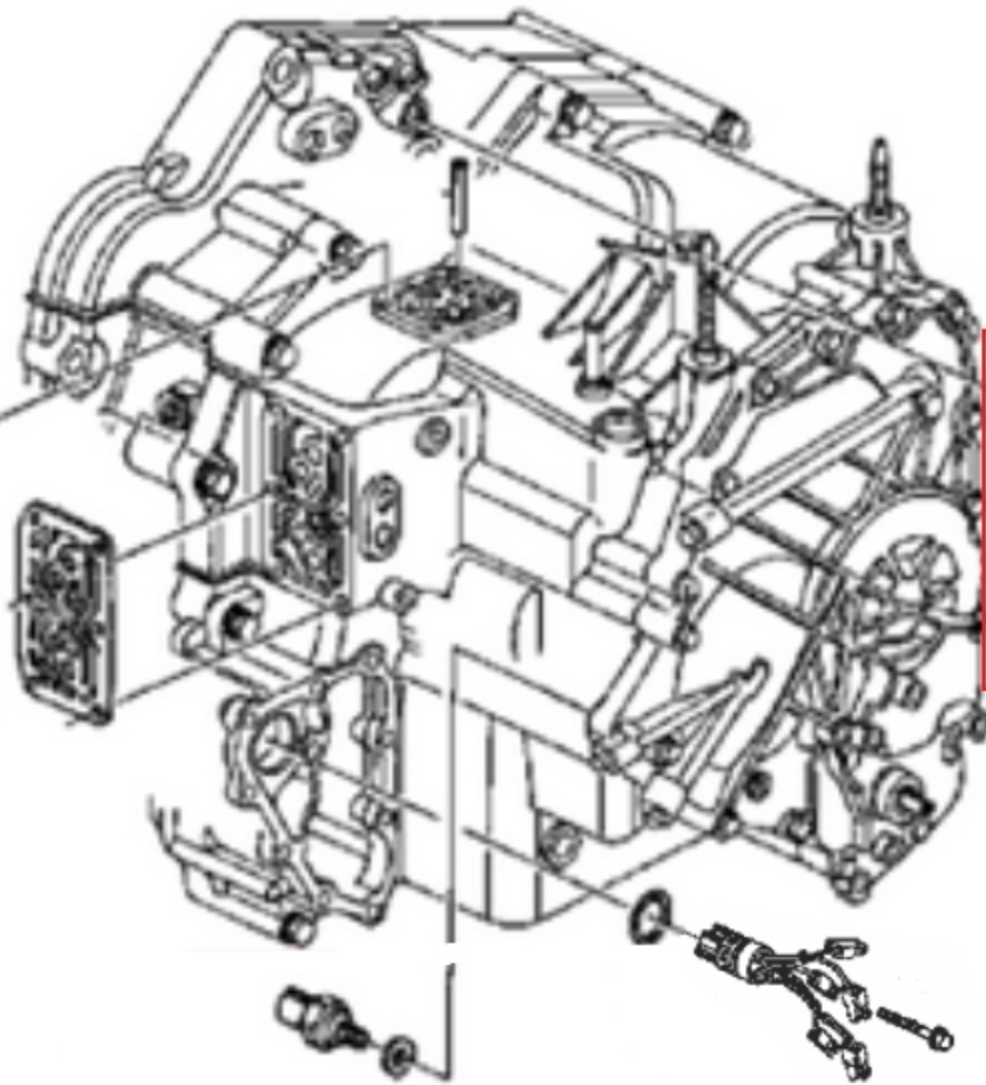

2002-2003: 28600-PRP-004
2nd Clutch Pressure Switch


28260-PRP-014

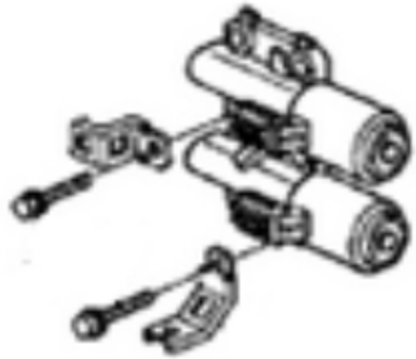

28610-RAY-003
3rd Clutch Pressure Switch

2nd Clutch Pressure Switch Replacement


1. Remove the air cleaner housing.
2. Disconnect the connector from the 2nd clutch pressure switch (A).

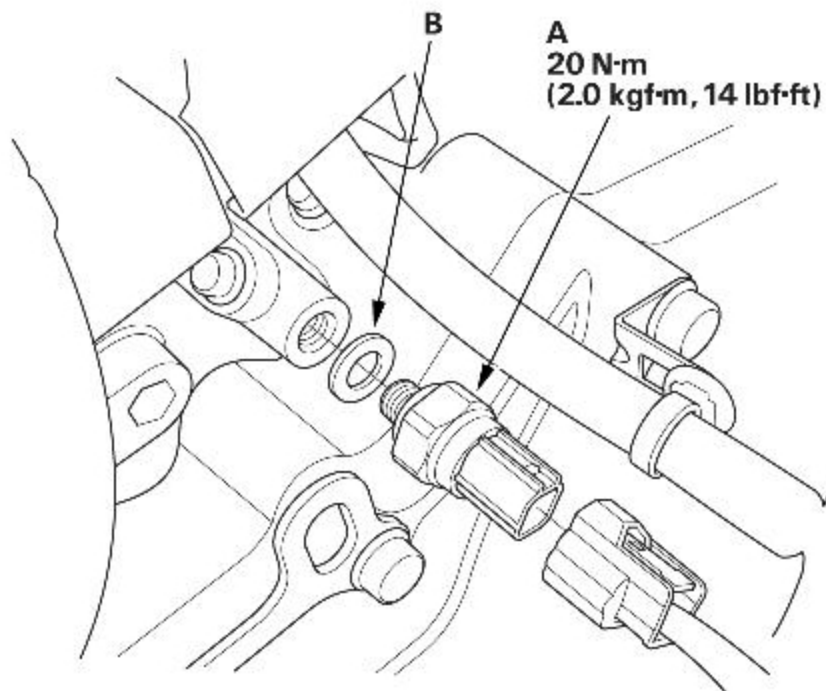

Application:
4AT
Honda CR-V 2002-2003


3. Replace the 2nd clutch pressure switch, then install a new one with a new sealing washer (B). Tighten the switch on the metal part, not the plastic part.
4. Reconnect the connector, making sure there is no water, oil, dust, or foreign particles inside it.
5. Install the air cleaner housing.

Mode 3

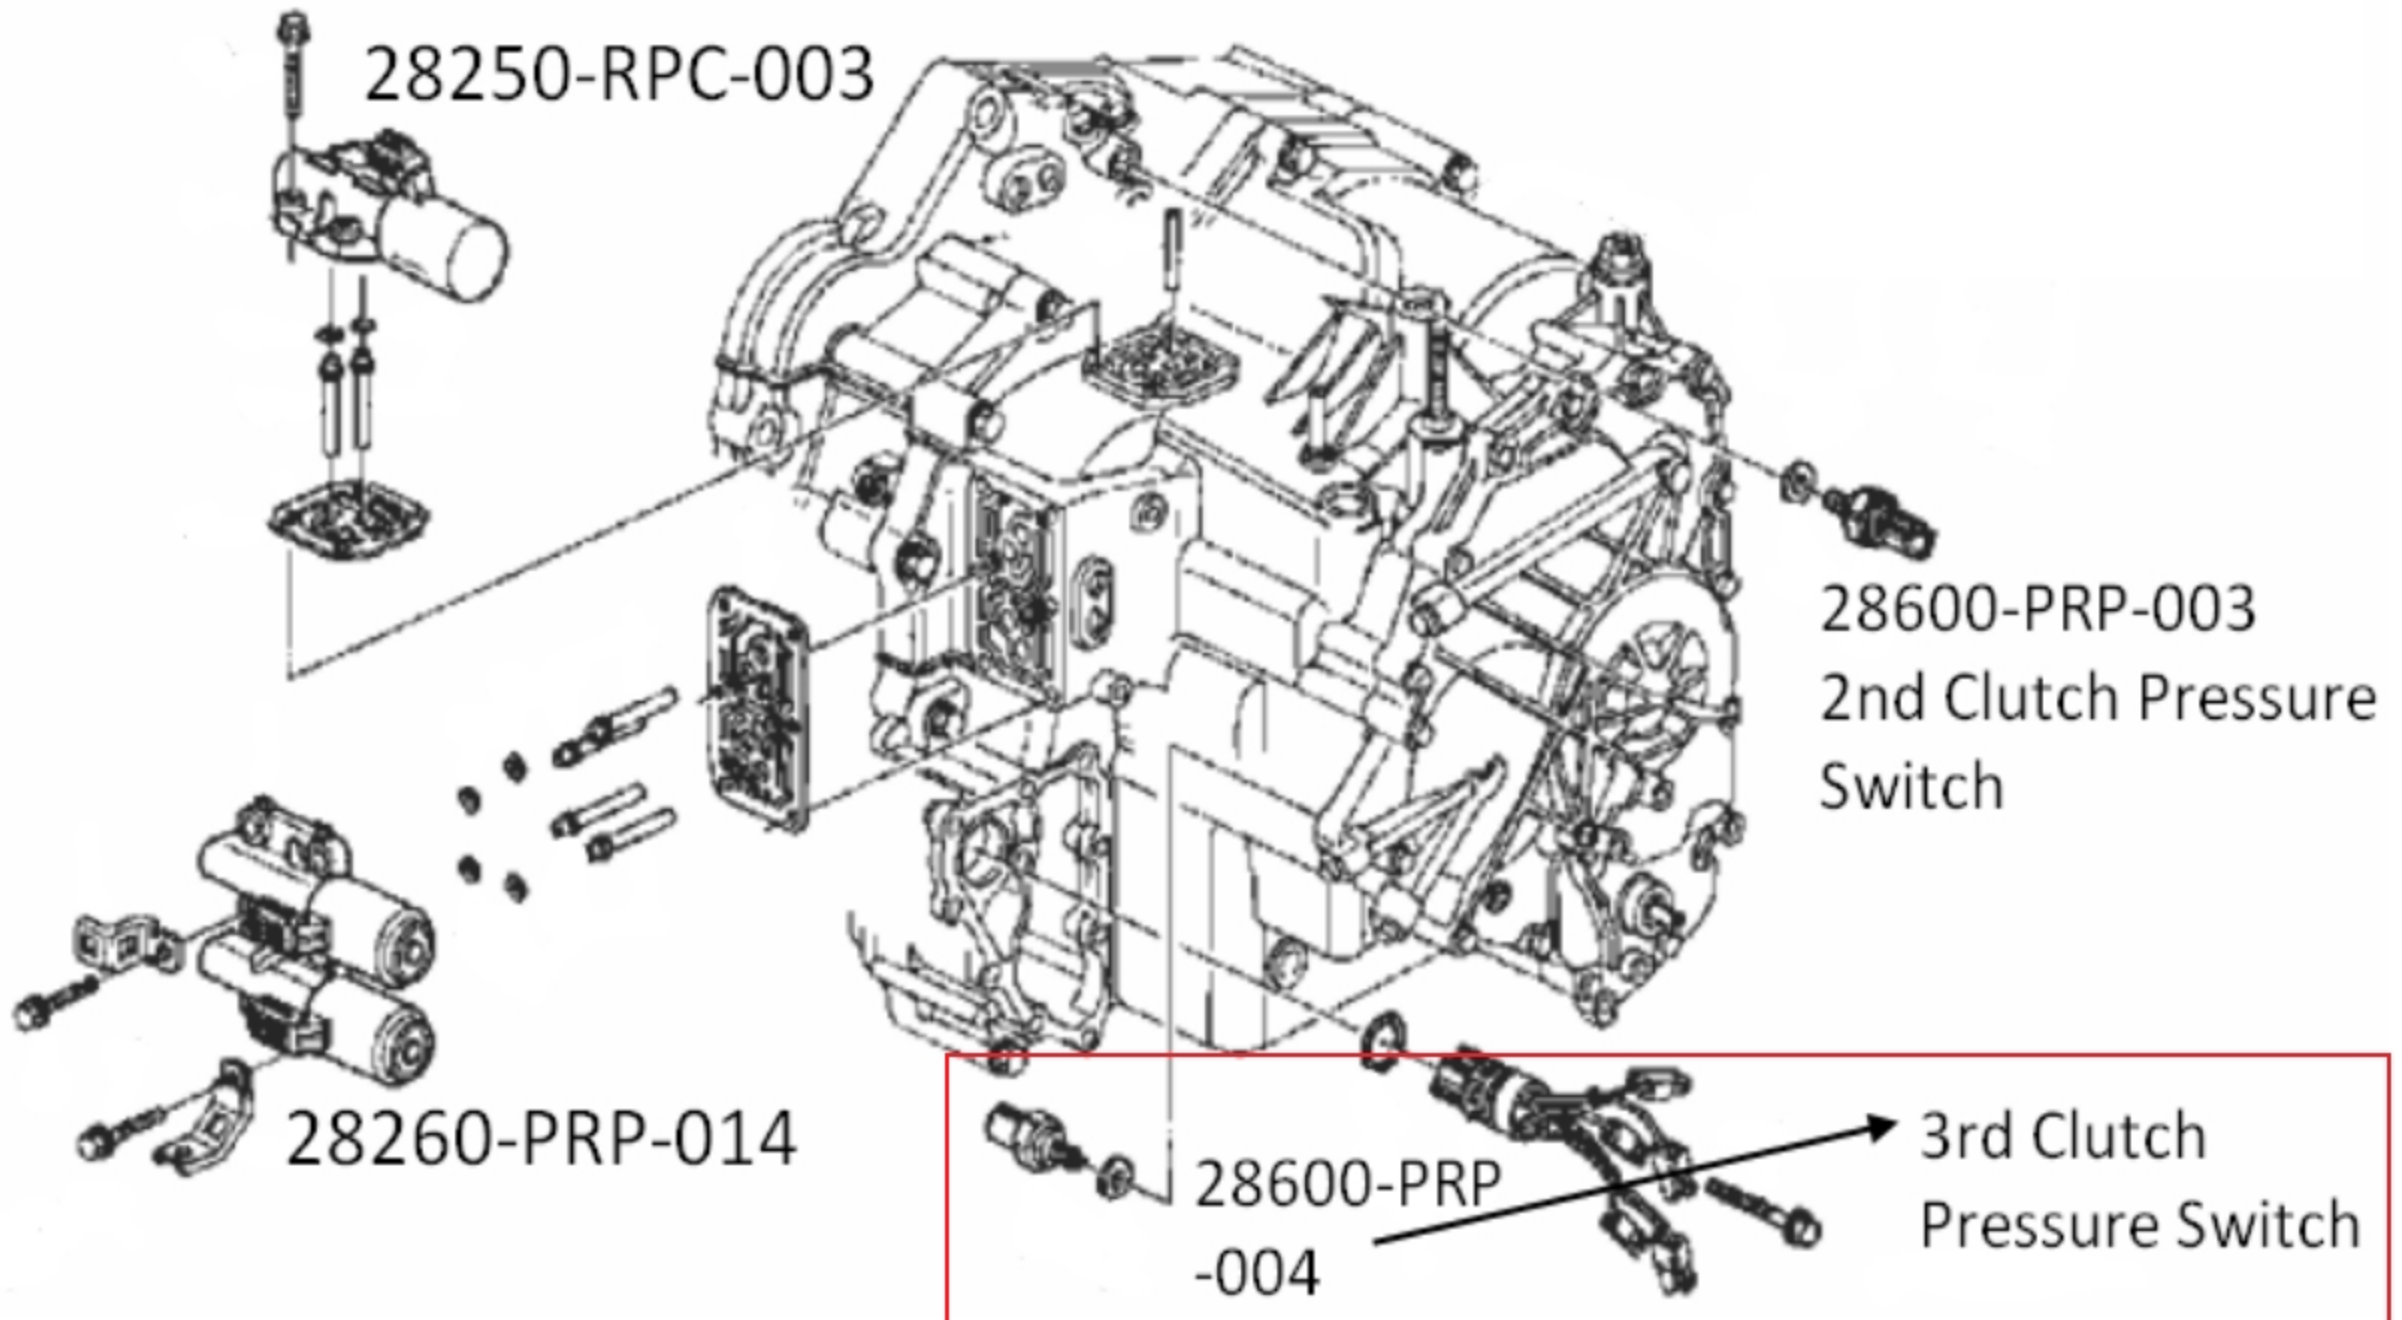

3rd Clutch Transmission Fluid Pressure Switch Replacement

1. Raise the vehicle up on a lift, or apply the parking brake, block the rear wheels, and raise the front of the vehicle. Make sure it is securely supported.
2. Remove the splash shield.
3. Disconnect the 3rd clutch transmission fluid pressure switch connector, and remove the switch.
4. Install the new 3rd clutch transmission fluid pressure switch (A) and a new sealing washer (B), and tighten the switch.

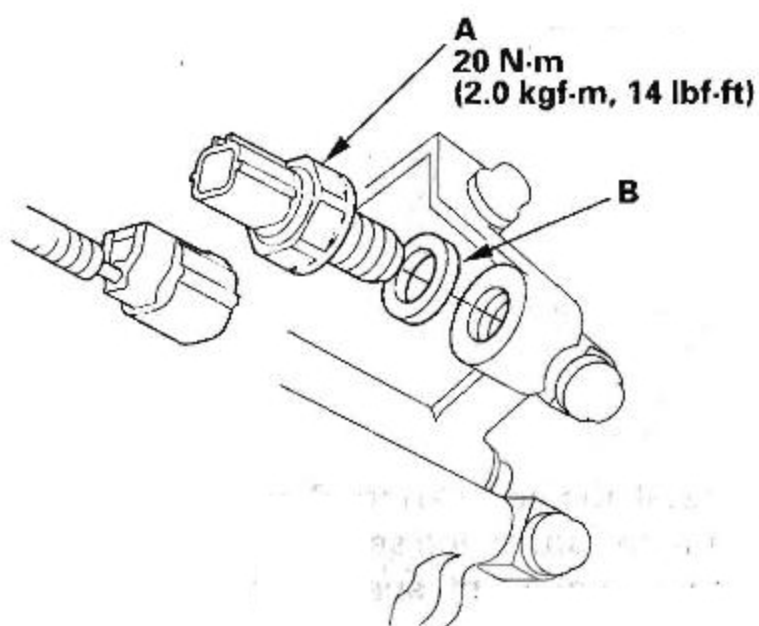

Application:

5AT

Acura RSX

2002-2003

5. Make sure there is no water, oil, dust, or foreign particles inside the connector.
6. Connect the connector securely.
7. Install the splash shield.