



Mode 1

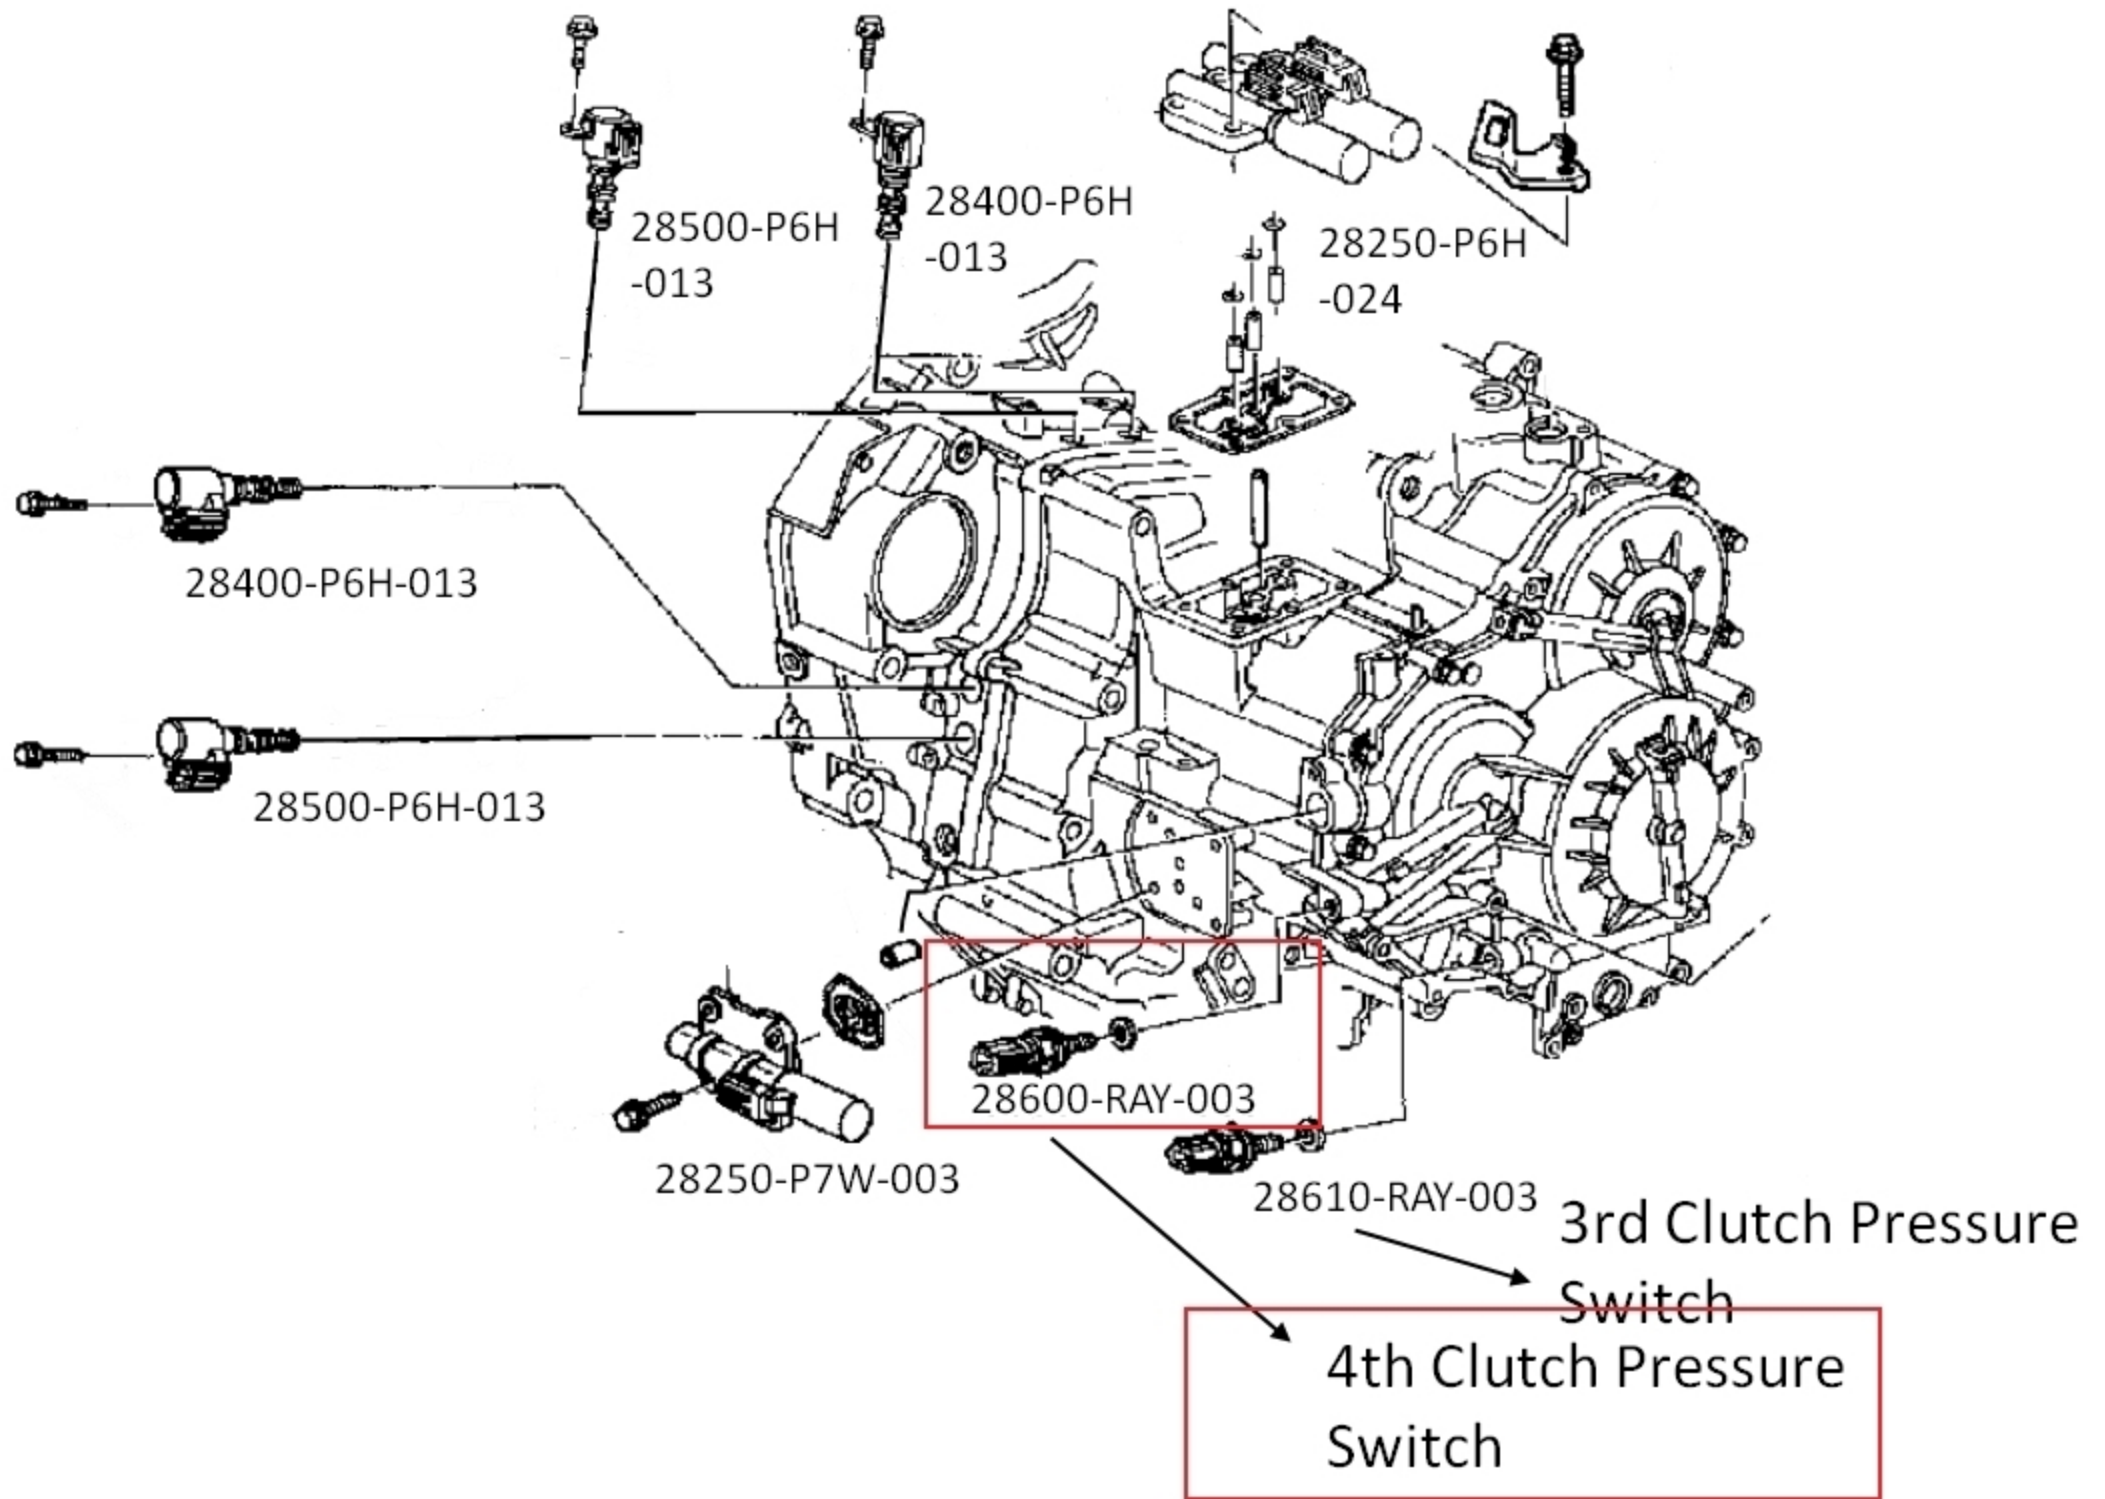

4th Clutch Transmission Fluid Pressure Switch Replacement


1. Raise the vehicle on a lift.
2. Remove the splash shield.
3. Disconnect the connector from the 4th clutch transmission fluid pressure switch (A).
4. Remove the switch, then install a new one with a new sealing washer (B). Do not tighten the switch using the plastic connector.
5. Check the connector for water, corrosion, dust, and oil, then connect the connector securely.
6. Install the splash shield.

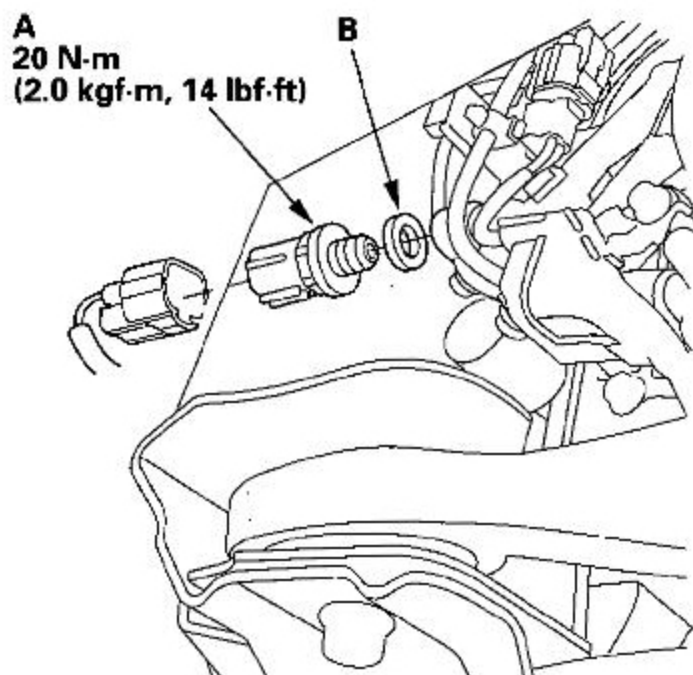


Application:

5AT	
Honda Accord V6	2003-2007
Honda Pilot	2005
Acura TL	2004-2006


Mode 2

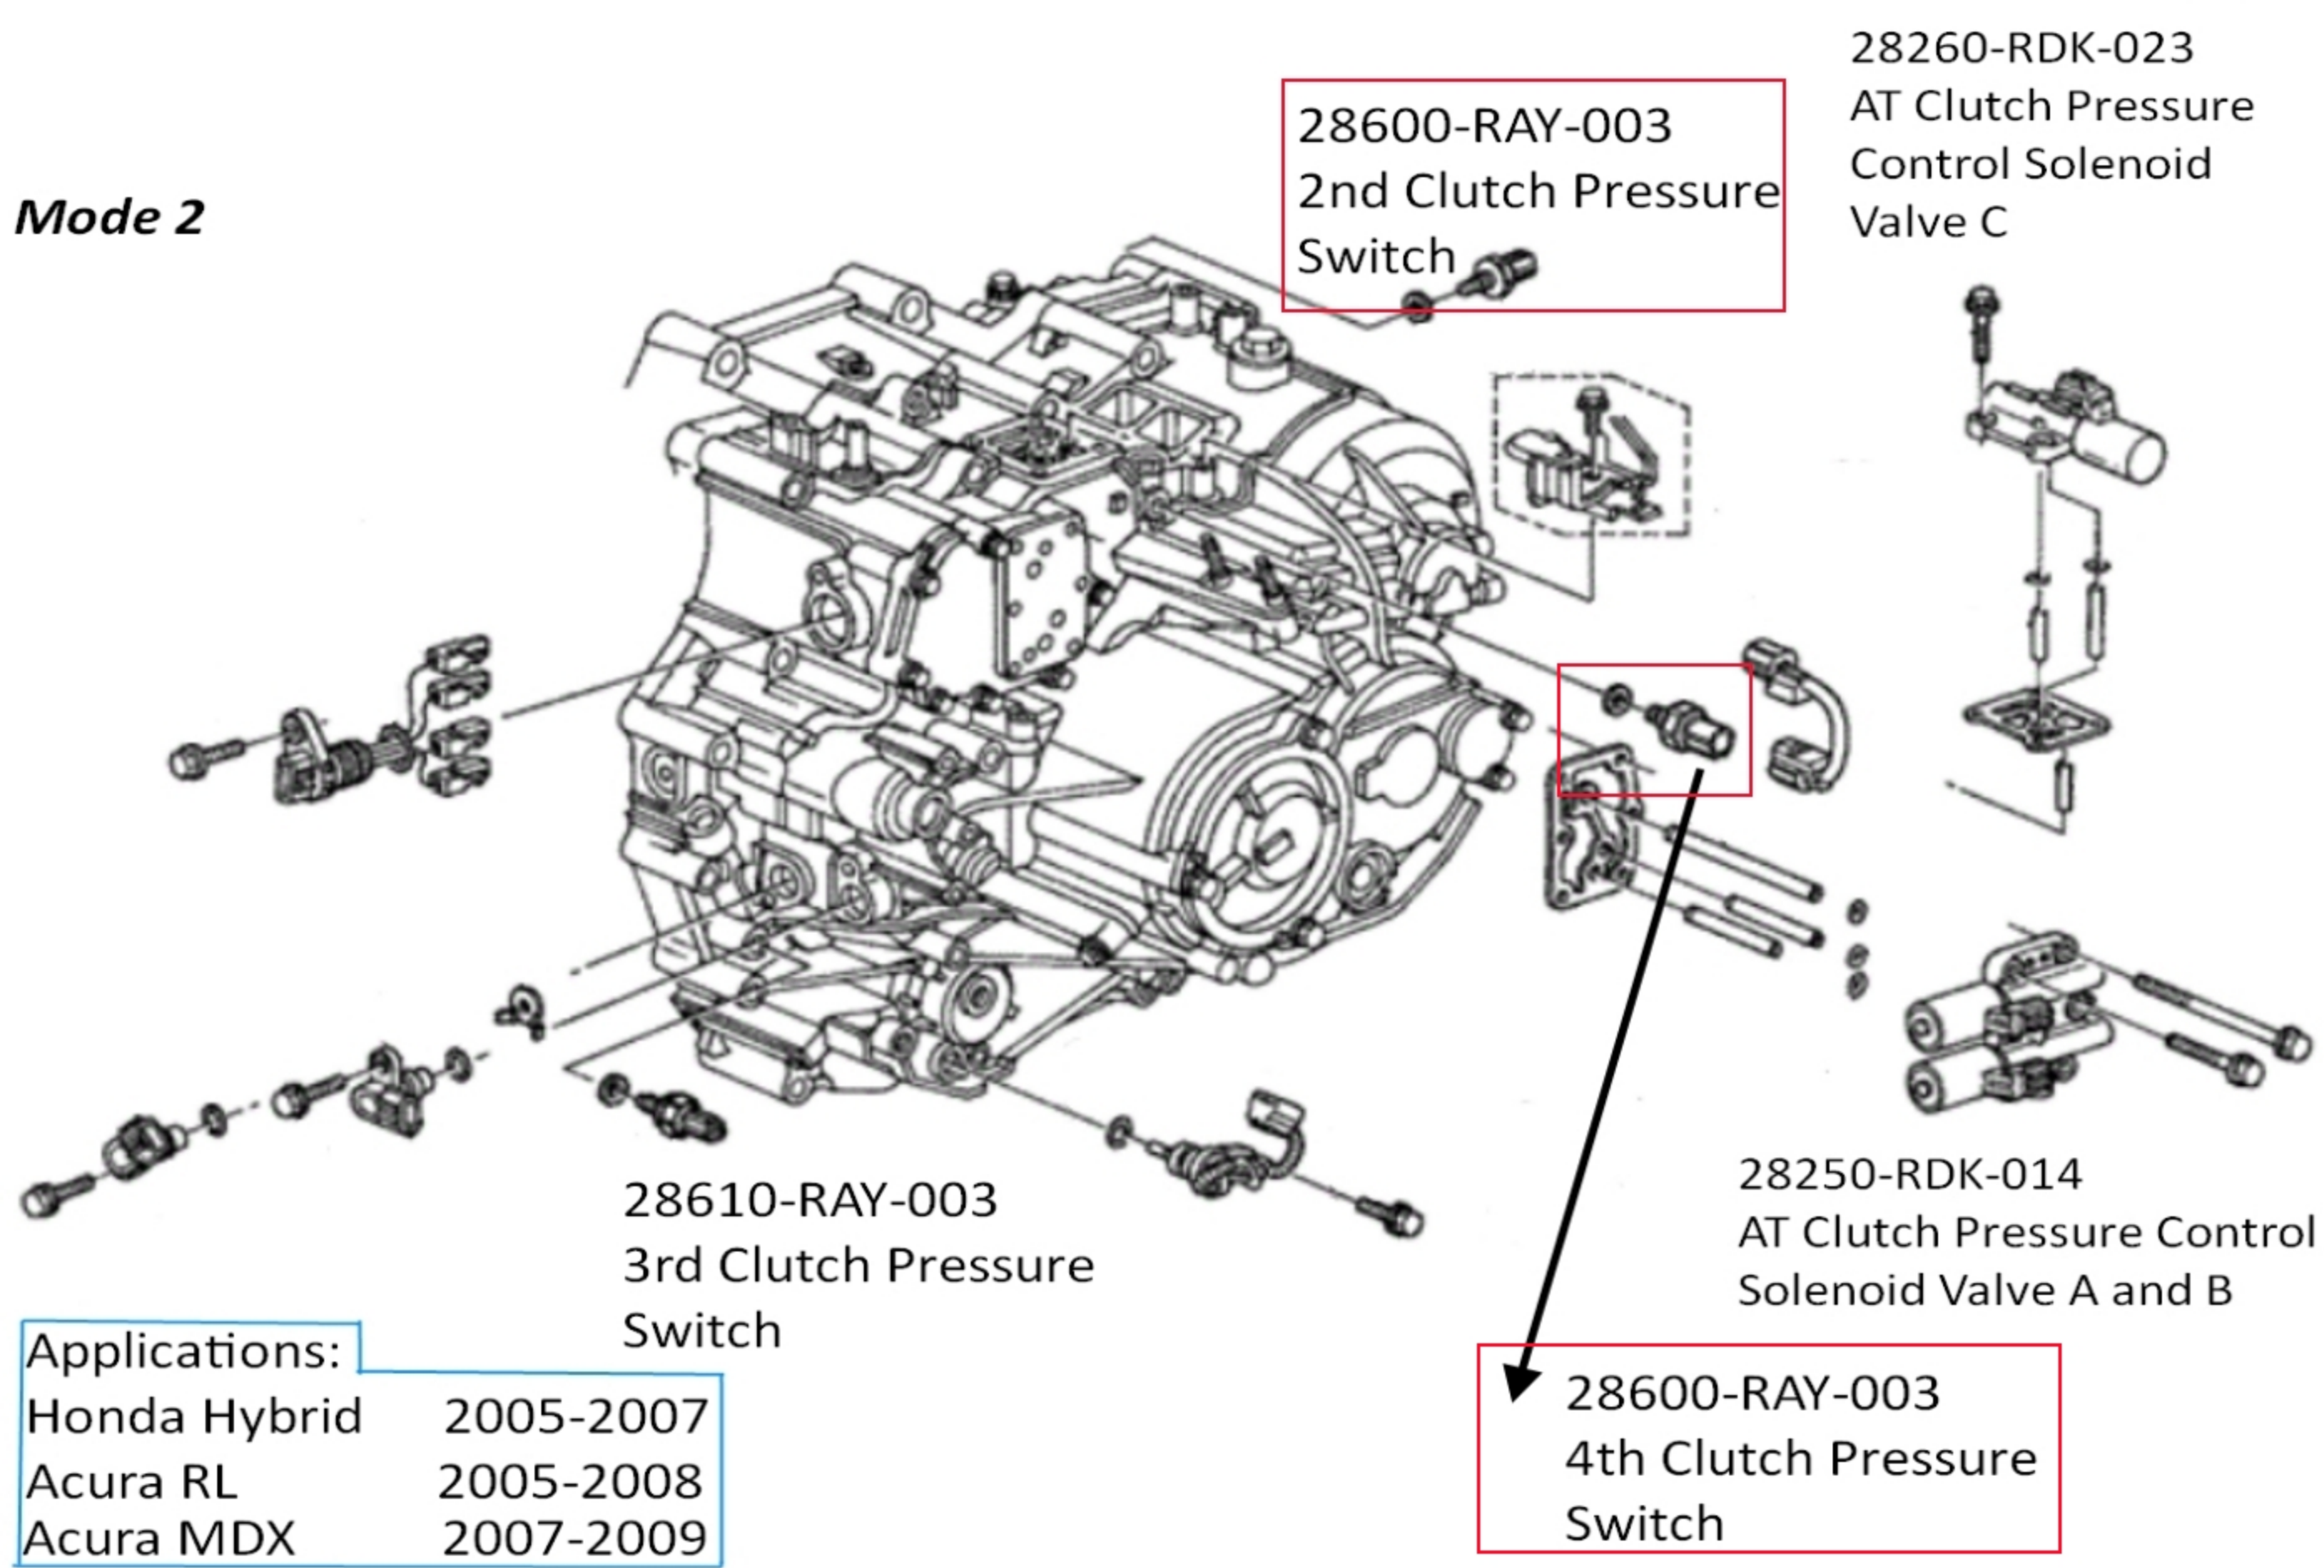


Mode 3

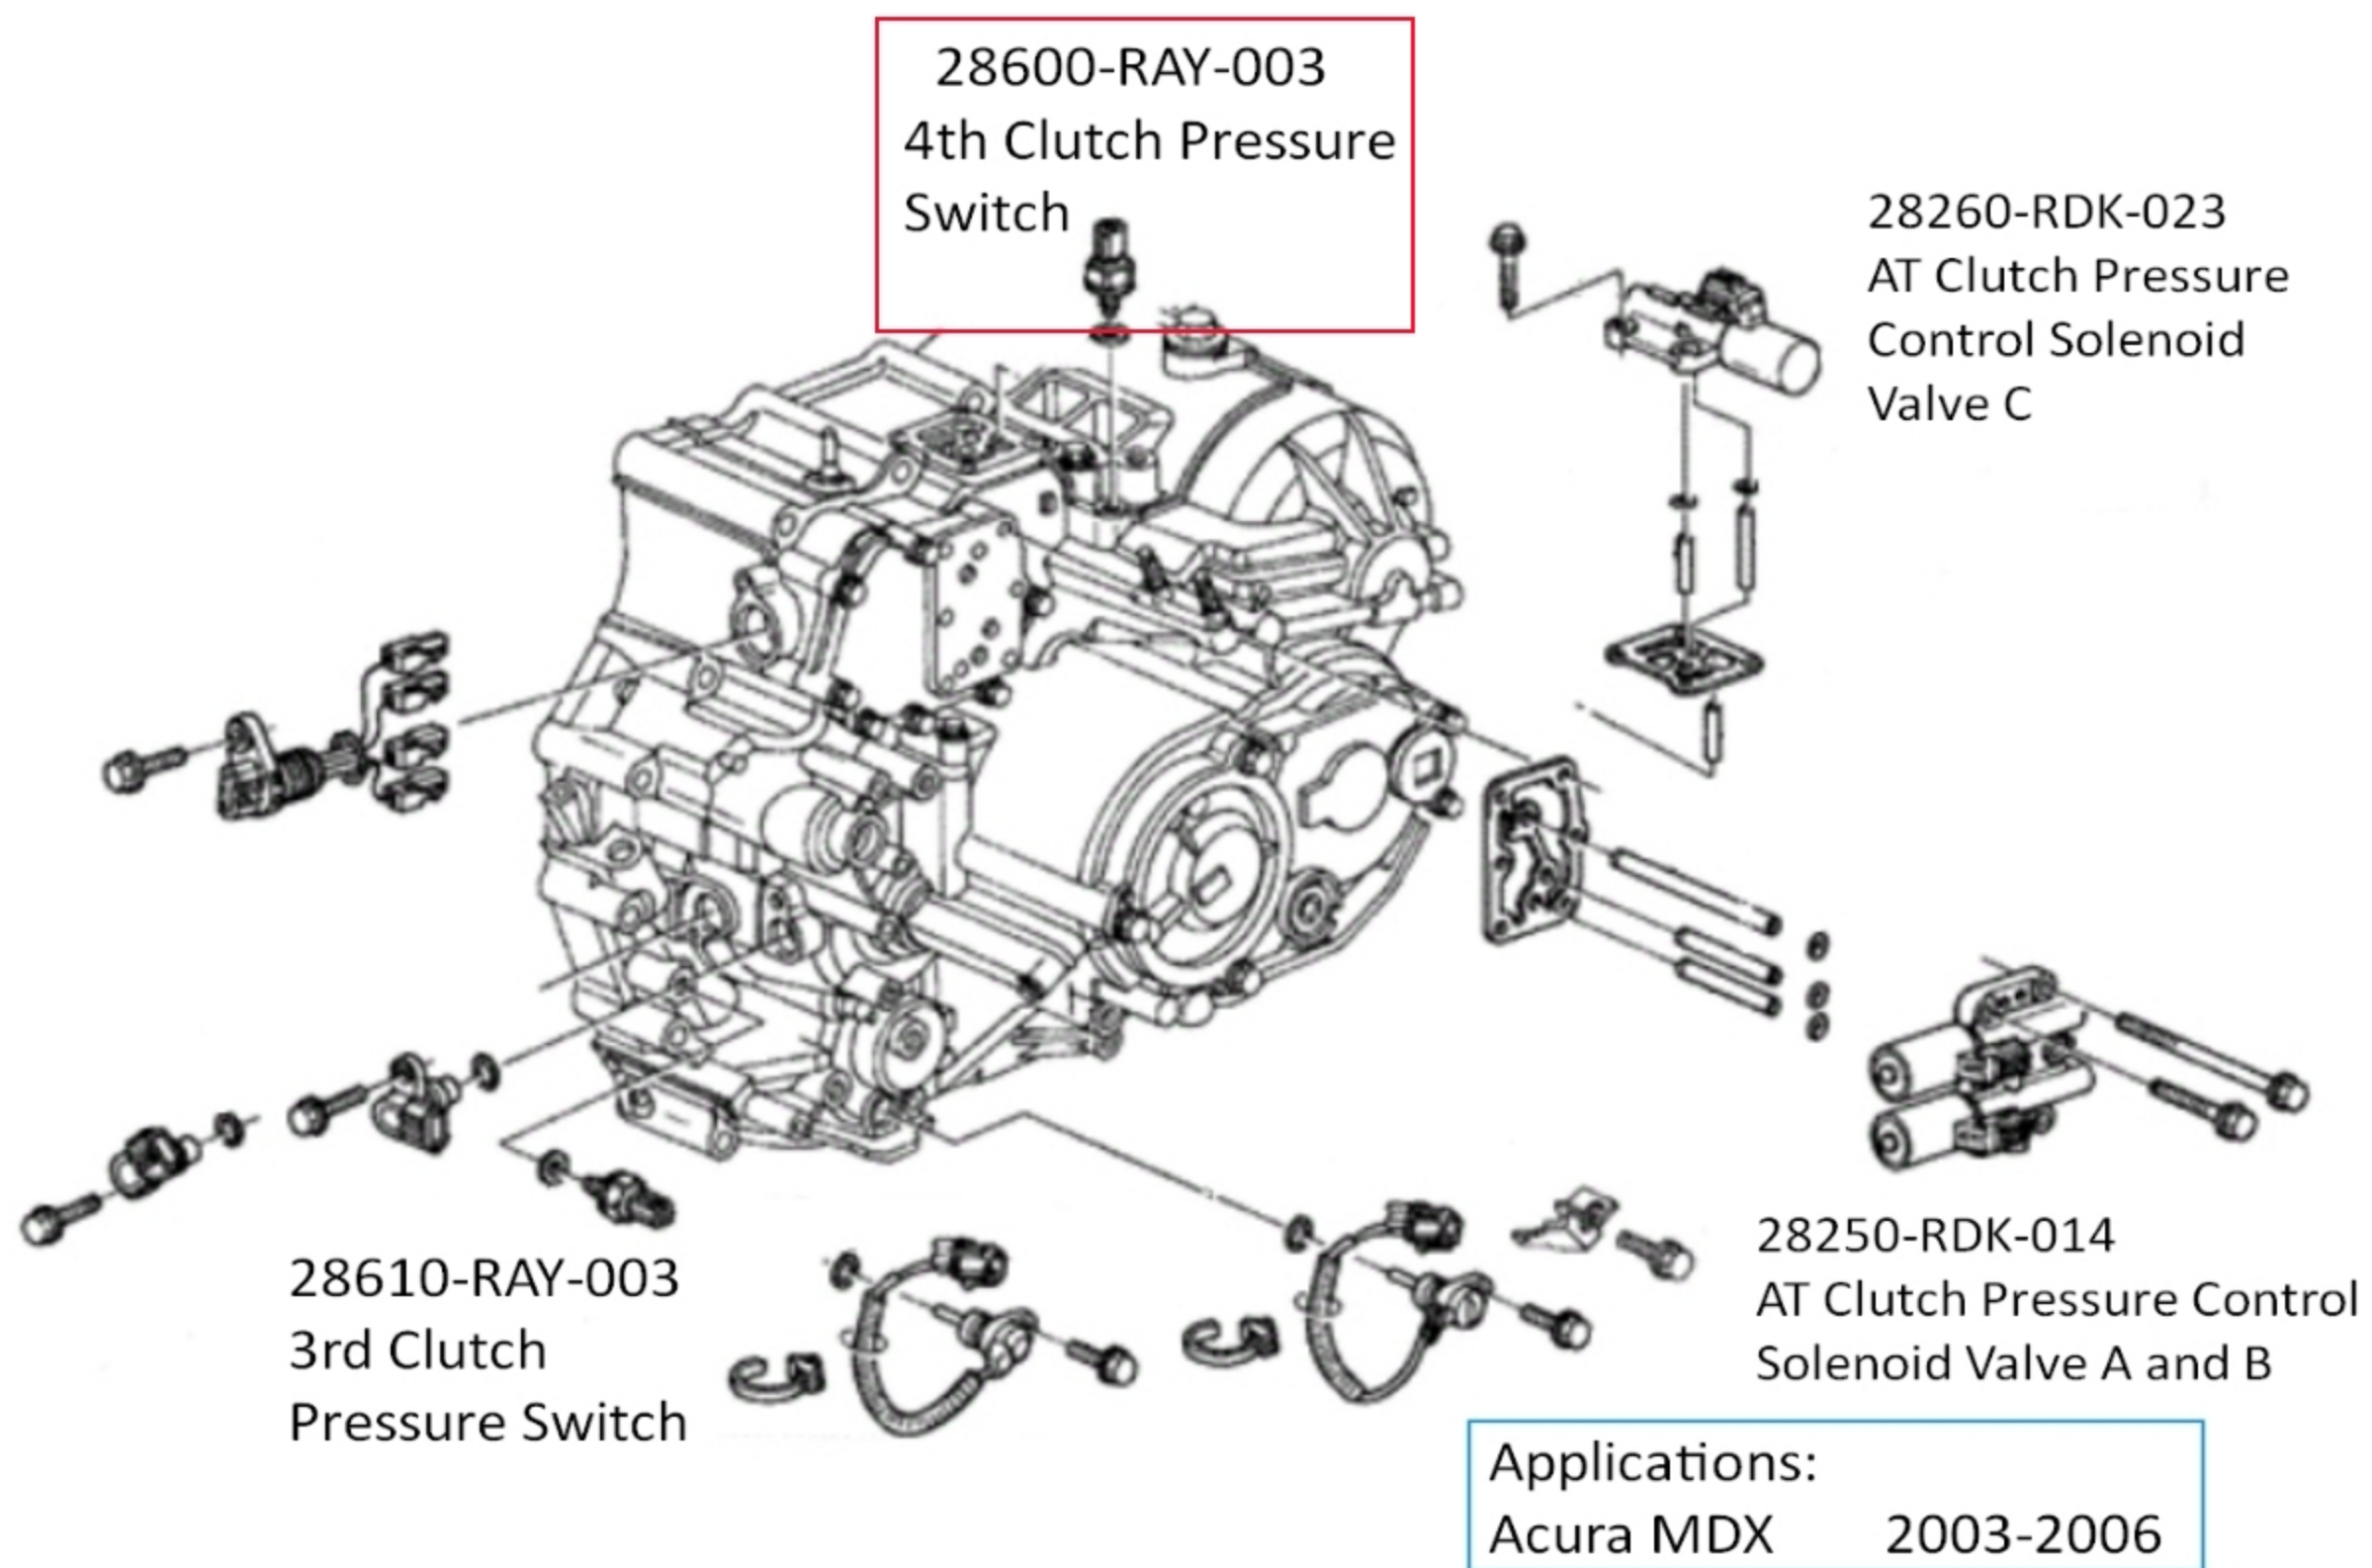

Mode 4

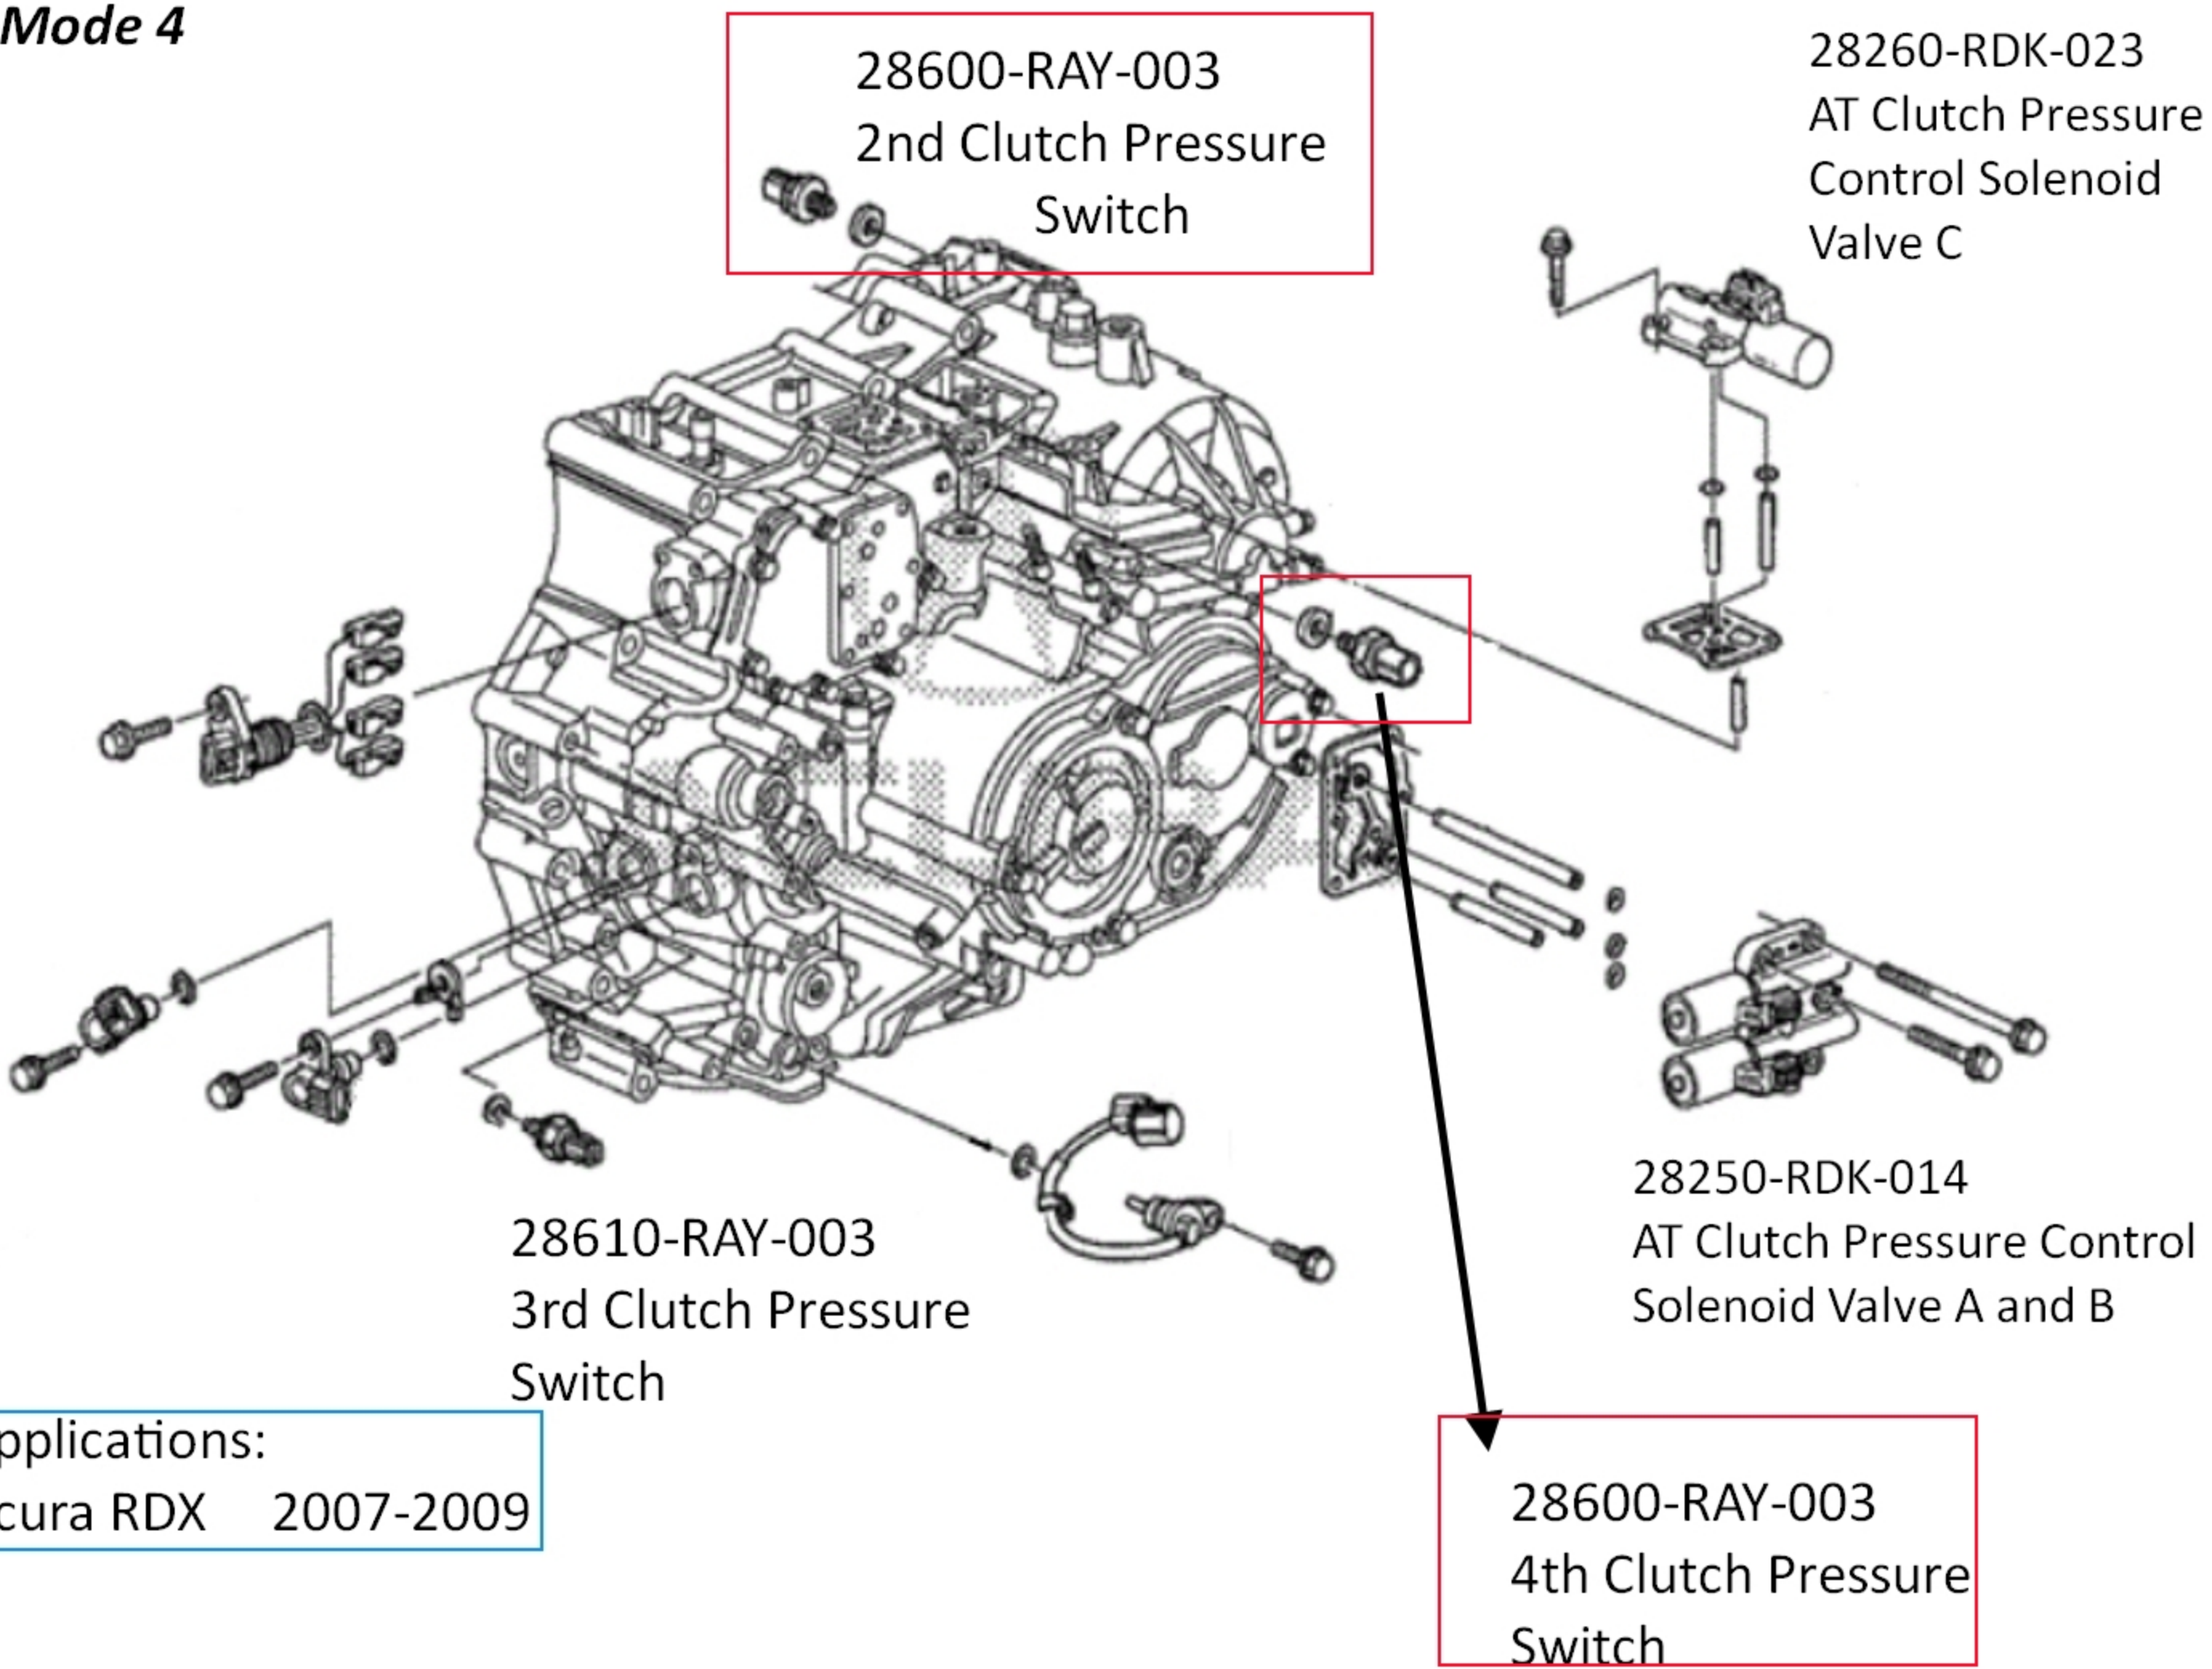

Mode 5

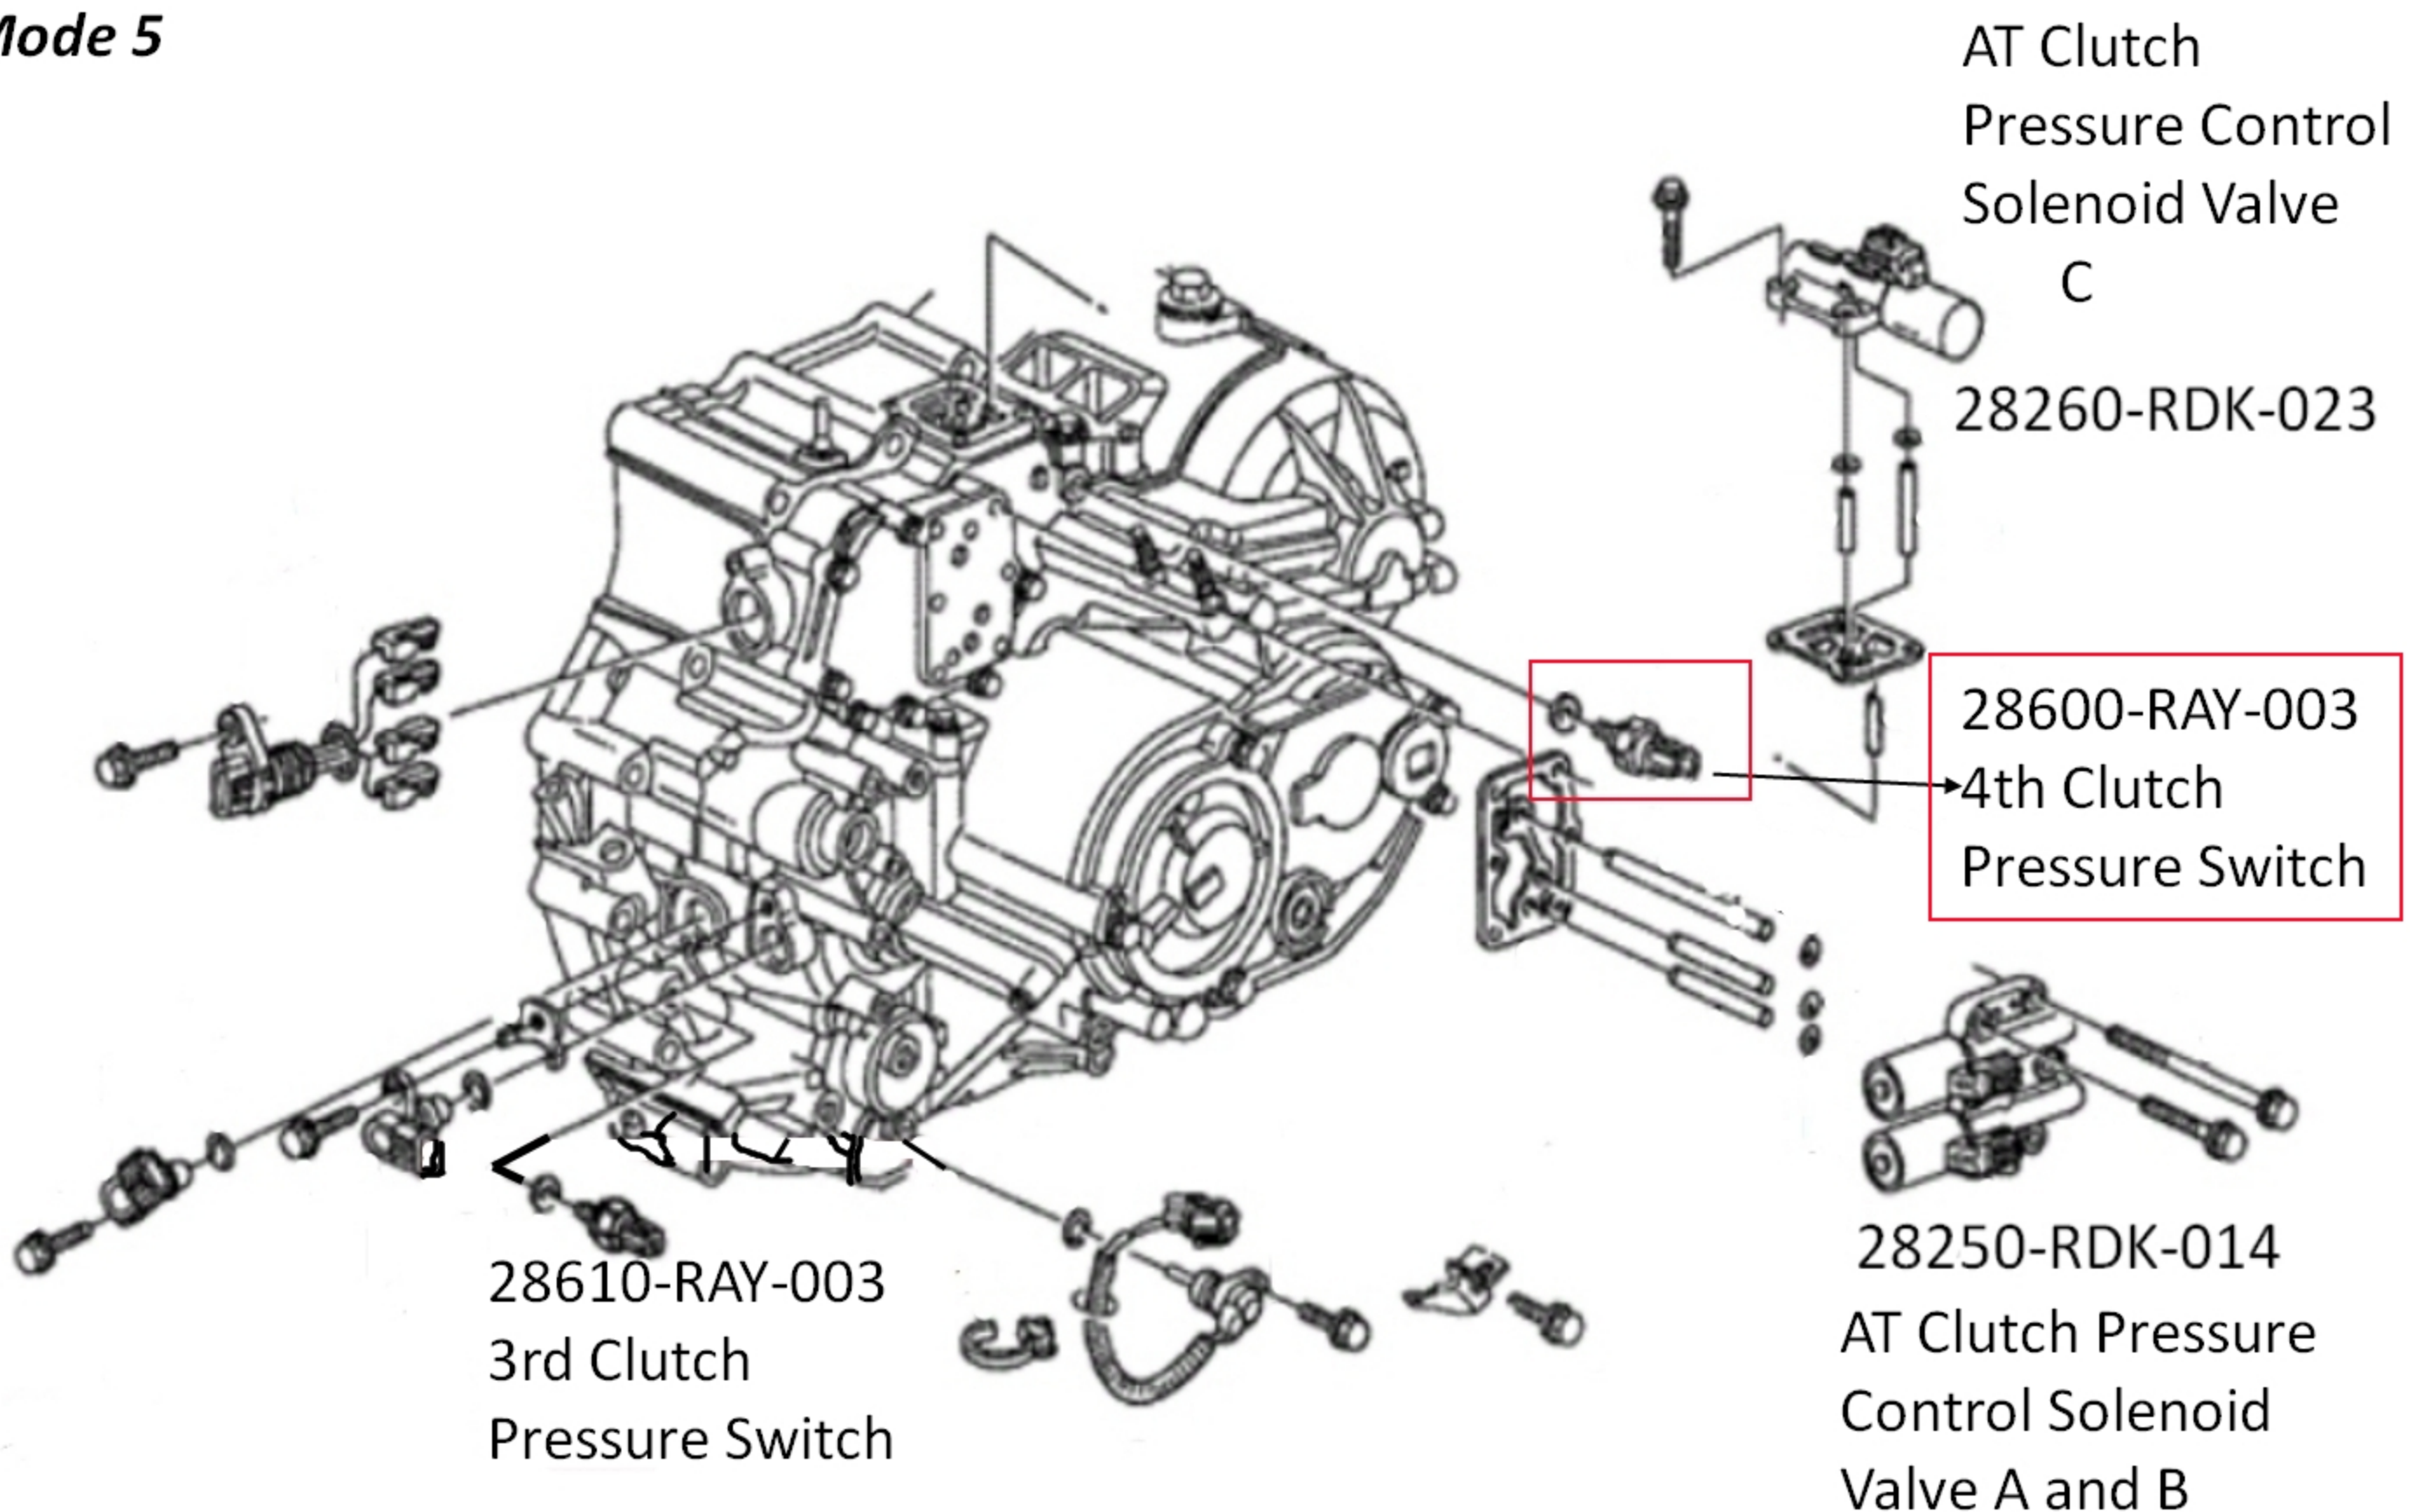

Applications:
Honda Pilot 2006-2008
Honda Ridgeline 2006-2008